

LIFE FITNESS 15" ATTACHABLE TV (PAL / SECAM / DVB-T2)

OPERATION MANUAL

M051-00K96-0009



Life Fitness
WHAT WE LIVE FOR

CORPORATE HEADQUARTERS

Columbia Centre III, 9525 West Bryn Mawr Avenue, Rosemont, Illinois 60018 • U.S.A.

847.288.3300 • FAX: 847.288.3703

Service phone number: 800.351.3737 (toll-free within U.S.A., Canada)

Global Website: www.lifefitness.com

INTERNATIONAL OFFICES

AMERICAS

North America Life Fitness, Inc.

Columbia Centre III
9525 West Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A
Telephone: (847) 288 3300
Fax: (847) 288 3703
Service Email: customersupport@lifefitness.com
Service Website: www.lifefitness.com/parts
Sales/Marketing Email:
commercialsales@lifefitness.com
Operating Hours: 7:00 am-6:00 pm (CST)

Brazil Life Fitness Brasil

Av. Cidade Jardim, 900
Jd. Paulistano
São Paulo, SP 01454-000
BRAZIL
SAC: 0800 773 8282
Telephone: +55 (11) 3095 5200
Fax: +55 (11) 3095 5201
Service Email: suporte@lifefitness.com.br
Sales/Marketing Email: lifefitness@lifefitness.com.br
Service Operating Hours:
9:00 - 17:00 (BRT) (Monday-Friday)
Store Operating Hours:
9:00 - 20:00 (BRT) (Monday-Friday)
10:00 - 16:00 (BRT) (Saturday)

Latin America & Caribbean* Life Fitness Inc.

Columbia Centre III
9525 West Bryn Mawr Avenue
Rosemont, IL 60018 U.S.A
Telephone: (847) 288 3300
Fax: (847) 288 3703
Service Email: customersupport@lifefitness.com
Sales/Marketing Email:
commercialsales@lifefitness.com
Operating Hours: 7:00am-6:00pm (CST)

EUROPE, MIDDLE EAST, & AFRICA (EMEA)

Netherlands & Luxemburg Life Fitness Atlantic BV

Bijdorplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
Telephone: (+31) 180 646 666
Fax: (+31) 180 646 699
Service Email: service.benelux@lifefitness.com
Sales/Marketing Email:
marketing.benelux@lifefitness.com
Operating Hours: 9.00h-17.00h (CET)

United Kingdom & Ireland Life Fitness UK LTD

Queen Adelaide
Ely, Cambs, CB7 4UB
Telephone: General Office (+44)
1353.666017
Customer Support (+44) 1353.665507
Fax: (+44) 1353.666018
Service Email: uk.support@lifefitness.com
Sales/Marketing Email: life@lifefitness.com
Operating Hours:
General Office: 9.00am - 5.00pm (GMT)
Customer Support: 8.30am - 5.00pm (GMT)

Germany & Switzerland Life Fitness Europe GMBH

Siemensstraße 3
85716 Unterschleißheim
GERMANY
Telephone: (+49) 89.31 77 51.0 (Germany)
(+41) 0848 000 901 (Switzerland)
Fax: (+49) 89.31 77 51.99 (Germany)
(+41) 043 818 07 20 (Switzerland)
Service Email: kundendienst@lifefitness.com
Sales/Marketing Email:
kundenberatung@lifefitness.com
Operating Hours: 08.30 -16.30h (CET)

Austria Life Fitness Austria

Vertriebs G.m.b.H.
Dückerstraße 7-9/3/36
1220 Vienna
AUSTRIA
Telephone: (+43) 1.61.57.198
Fax: (+43) 1.61.57.198.20
Service Email: kundendienst@lifefitness.com
Marketing/Sales Email:
kundenberatung@lifefitness.com
Operating Hours: 08:30-16.30.h (MEZ)

Spain Life Fitness IBERIA

C/Frederic Mompou 5,1ª^a
08960 Sant Just Desvern Barcelona
SPAIN
Telephone: (+34) 93.672.4660
Fax: (+34) 93.672.4670
Service Email: servicio.tecnico@lifefitness.com
Sales/Marketing Email: info.iberia@lifefitness.com
Operating Hours:
9.00h-18.00h (Monday-Thursday)
8.30h-15.00h (Friday)

Belgium Life Fitness Benelux NV

Parc Industriel de Petit-Rechain
4800 Verviers
BELGIUM
Telephone: (+32) 87 300 942
Fax: (+32) 87 300 943
Service Email: service.benelux@lifefitness.com
Sales/Marketing Email:
marketing.benelux@lifefitness.com
Operating Hours: 9.00h -17.00h (CET)

Italy

Life Fitness Europe GmbH

Siemensstraße 3
85716 Unterschleißheim
GERMANY
Telephone: (+39) 02-55378611
Service: 800438836 (In Italy)
Fax: (+39) 02-55378699
Service Email: assistenza@lifefitness.com
Sales/Marketing Email: info@lifefitnessitalia.com
Operating Hours: 08:30 - 16:30h (CET)

All Other EMEA Countries & Distributor Business C-EMEA*

Bijdorplein 25-31
2992 LB Barendrecht
THE NETHERLANDS
Telephone: (+31) 180 646 644
Fax: (+31) 180 646 699
Service Email: service.db.cemea@lifefitness.com
Sales/Marketing Email:
marketing.db.cemea@lifefitness.com
Operating Hours: 9.00h-17.00h (CET)

ASIA PACIFIC (AP)

Japan Life Fitness Japan

Japan Nippon Brunswick Bldg., #8F
5-27-7 Sendagaya
Shibuya-Ku, Tokyo
Japan 151-0051
Telephone: (+81) 3.3359.4309
Fax: (+81) 3.3359.4307
Service Email: service@lifefitnessjapan.com
Sales/Marketing Email: sales@lifefitnessjapan.com
Operating Hours: 9.00h-17.00h (JAPAN)

China and Hong Kong Life Fitness Asia Pacific LTD

Room 2610, Miramar Tower
132 Nathan Road
Tsimshatsui, Kowloon
HONG KONG
Telephone: (+852) 2891.6677
Fax: (+852) 2575.6001
Service Email: HongKongEnquiry@lifefitness.com
Sales/Marketing Email:
ChinaEnquiry@lifefitness.com
Operating Hours: 9.00h-18.00h

All Other Asia Pacific countries & distributor business Asia Pacific*

Room 2610, Miramar Tower
132 Nathan Road
Tsimshatsui, Kowloon
HONG KONG
Telephone: (+852) 2891.6677
Fax: (+852) 2575.6001
Service Email: HongKongEnquiry@lifefitness.com
Sales/Marketing Email:
ChinaEnquiry@lifefitness.com
Operating Hours: 9.00h-18.00h

Also check www.lifefitness.com for local representation or distributor/dealer.

TABLE OF CONTENTS

Important Safety Instructions	3
Media Connections	6
Specifications	7
Quick Access - TV Menu Access	8
Basic Functions of LF TV Remote	9
Basic Functions of IR TV Remote	10
TV Menu Access - Console Controls	12
Basic Function - LCD Console Controls for Exerciser	13
Basic Function - Front Panel Controls	14
Getting Started	15
Select Input Source	16
First Time Installation	16
Main On Screen Display Menus	18
Channel Menu (DVB-T)	19
Channel Menu (DVB-C)	22
Picture Menu	23
Sound Menu	25
Time Menu	26
Lock Menu	28
Hotel Menu	29
Setup Menu	30
PC Screen Menu	31
Maintenance & Troubleshooting	32
Warranty Information	37

IMPORTANT SAFETY INSTRUCTIONS



- **CAUTION:** Any changes or modifications to this equipment could void the product warranty.

- **DANGER:** To reduce the risk of electrical shock, always unplug this Life Fitness product before cleaning or attempting any maintenance activity.
- **WARNING:** To reduce the risk of burns, fire, electric shock, or injury, it is imperative to connect each product to a properly grounded electrical outlet.
- **WARNING:** To prevent injury, this product must be securely attached in accordance with the installation instructions.
- Never operate a Life Fitness product if it has a damaged power cord or electrical plug, or if it has been dropped, damaged, or even partially immersed in water. If this occurs, contact Life Fitness Customer Support Services as outlined on page one of this manual.
- Position this product so that the AC power cord plug is accessible to the user.
- Keep the power cord away from heated surfaces. Do not pull the equipment by the power cord or use the cord as a handle.
- If the electrical supply cord is damaged, it must be replaced by the manufacturer, an authorized service agent, or a similarly qualified person to avoid a hazard.
- Always follow the product instructions for proper operation.
- Never insert objects into any opening of the Life Fitness product. If an object should drop inside, unplug this Life Fitness product and carefully retrieve it while the unit is not in use. If the object cannot be reached, contact Life Fitness Customer Support Services.
- Do not use this product outdoors, near swimming pools or in areas of high humidity. Do not expose this product to dripping or splashing liquids. If the product should be exposed to liquid, contact Life Fitness Customer Support Services.
- Never operate a Life Fitness product with the air openings blocked. Keep air openings free of lint, hair, or any obstructing material.
- Use this product only for its intended use as described in this manual. Do not use attachments that have not been recommended by the manufacturer.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CONSIGNES DE SÉCURITÉ IMPORTANTES



- **MISE EN GARDE:** tout changement ou toute modification de ce matériel peut annuler la garantie du produit.

- **DANGER:** Pour réduire les risques de décharge électrique, toujours débrancher cet appareil Life Fitness avant le nettoyage ou toute mesure d'entretien.
- **AVERTISSEMENT:** Pour réduire les risques de brûlures, d'incendies, de décharges électriques ou de blessures, chaque appareil doit absolument être branché sur une prise électrique correctement mise à la terre.
- **AVERTISSEMENT:** Pour prévenir les blessures, ce produit doit être solidement fixé, conformément aux instructions d'installation.
- Ne jamais faire fonctionner un produit Life Fitness dont la fiche ou le cordon d'alimentation est endommagé, ni aucun appareil qui serait tombé ou aurait été endommagé ou même partiellement plongé dans l'eau. Si cela se produit, communiquer avec le service à la clientèle de Life Fitness comme indiqué sur une page de ce manuel.
- Placer l'appareil de façon à ce que l'utilisateur ait accès à la fiche du cordon d'alimentation.
- Tenir le cordon d'alimentation à l'écart de toute surface chauffée. Ne pas tirer l'appareil par le cordon d'alimentation; ne pas utiliser le cordon comme poignée.
- Si le cordon d'alimentation électrique est endommagé, il doit être remplacé par le fabricant, par un réparateur agréé ou par une personne qualifiée afin d'éviter tout danger.
- Toujours suivre les instructions sur le produit pour s'assurer de son fonctionnement adéquat.
- Ne jamais insérer aucun objet dans les ouvertures du produit Life Fitness. Si un objet tombe à l'intérieur du produit Life Fitness, le débrancher et extraire l'objet soigneusement pendant que l'appareil est débranché. S'il est impossible d'atteindre l'objet, communiquer avec le service à la clientèle de Life Fitness.
- Ne pas utiliser ce produit à l'extérieur, près d'une piscine ou dans des endroits très humides. Ne pas exposer ce produit à des liquides qui s'égouttent ni à des éclaboussures. Si le produit est en contact avec des liquides, communiquer avec le service à la clientèle de Life Fitness.
- Ne jamais faire fonctionner d'appareil Life Fitness dont les orifices d'aération seraient bloqués. Les garder exempts de peluches, de cheveux ou de toute obstruction.
- Utiliser ce produit uniquement pour les fins auxquelles il est destiné et de la manière décrite dans le présent manuel. Ne pas utiliser d'accessoires qui ne sont pas recommandés par le fabricant.

CONSERVER CES INSTRUCTIONS POUR TOUT USAGE ULTÉRIEUR.

IMPORTANT SAFETY INSTRUCTIONS


Note to the CATV Installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.


Antenna Grounding According to the NEC

Antenna Grounding According to the National Electrical Code, ANSI/NFPA 70.1.

1. Antenna lead in wire
2. Antenna discharge unit (NEC Section 810-20)
3. Grounding conductors (NEC Section 810-21)
4. Ground clamp
5. Power service grounding electrode system (NEC Article 250, Part H)
6. Ground clamp
7. Electric service equipment

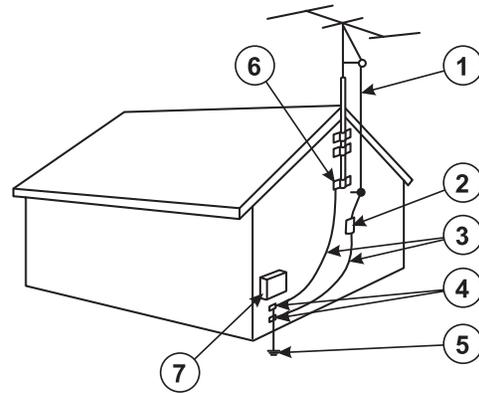

MEDIA CONNECTIONS

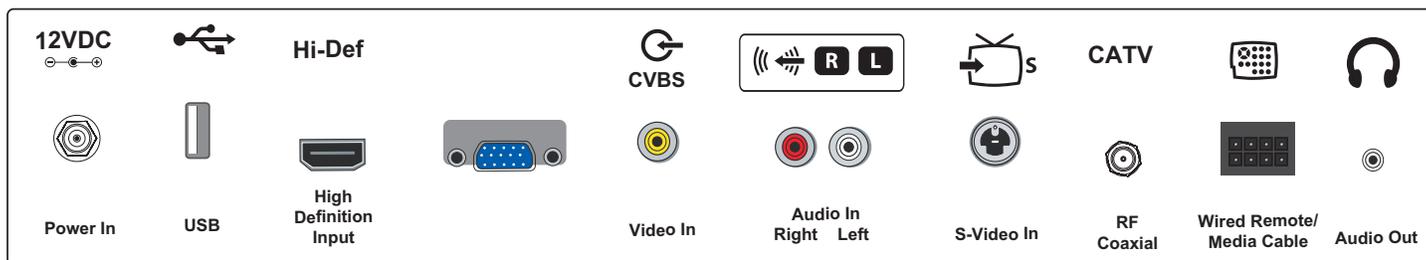

	Description	Connector Type
Power In	12 Volt DC Power In	Power Jack
USB	USB Flash Drive	USB Type A
High-Definition Input	High-Definition Audio & Video Connection	High-Definition
VGA In	PC-Video Connection	VGA
Video In	Video In	RCA (<i>yellow</i>)
Audio In	Stereo Line In	RCA (<i>red and white</i>)
S-Video In	S-Video Signal In	S-Video
RF Coaxial	Antenna / Cable Connection	RF F-Type
Wired Remote / Media Cable	Wired Remote Control Connection	Remote Control
Audio Out	Headphone Connection	3.5mm stereo jack, 0.3W

SPECIFICATIONS

15.4" Diagonal Wide Screen Format

Aspect Ratio: 16:10

Viewing Angle: 140 degrees horizontal x 120 degrees diagonal

HD Channel Ready: High-definition television will accept content up to 1080p

Visible Screen Size: 13" L x 8.15" H (33cm L X 20cm H)

Brightness: 330nits (cd/m²)

Display Color: 26.2 million

Resolution: 5.3 million pixels, 1680(H) X 1050(V)WSXGA+

Contrast Ratio: 800:1

Video: Composite, AV, S-Video, High-Definition, VGA

RF Analog TV Systems: SECAM, PAL-B/G, PAL-D/K, PAL-I, PAL-LL

Digital Broadcasting System: DVB-T/T2, DVB-C

MPEG-2, MPEG-4

Audio: NICAM/A2, MPEG-1, AC3+

Channel Coverage: UHF, VHF, CATV

Antenna: RF: 75-ohm RF Input (+12dBmV +/- 25dB)

Power Requirements: 20W Nominal

External Power Supply: 12Vdc 5A

Power Rating:

AC Power Input: 100-240V ~ 50/60 Hz 1.5A

DC Supply Input: 12V ... 5A

Headphone Jack: 3.5mm Stereo, 300 milliwatt

Physical Dimensions:

Length: 16" (40.2cm)

Depth: 2.6" (6.7cm)

Height: 11.6" (29.5cm)

Weight: 8.5lbs. (4.2 kg)

Shipping Dimensions:

Length: 21" (53.3cm)

Depth: 7" (17.8cm)

Height: 15" (38.1cm)

Weight: 11.2 lbs. (5.5 kg)

LCD Screen Length: 13" (33cm)

LCD Screen Height: 8.15" (20cm)

VESA Mounting Support: 75mm(H) x 75mm(W), 100mm (H) x 100mm (W)

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

QUICK REFERENCE - TV MENU ACCESS

LIFE FITNESS recommends programming the 15" Attachable TV by using an IR TV Remote.

The TV can also be programmed by using an attachable LF TV REMOTE if on the order (for Achieve consoles) and through an Integrity, Inspire or Discover SI console. Please follow the guidelines below to program the TV. The password key on Life Fitness TVs is always "0000".

If you are unable to follow the guidelines above, do not have an IR TV REMOTE, or if there are any other issues with the 15" Attachable TV please promptly report the issue to Life Fitness Customer Support Services.

Action	LF TV Remote	IR (Infrared) TV Remote	Integrity Consoles	Inspire & Discover SI Consoles
Access Setup Menu	Press and hold the POWER key for 5 seconds.	Press MENU.	Press and hold TV POWER key for 5 seconds.	Enter the SYSTEM OPTION MENU.
Scroll Menu	Use the UP and DOWN arrow keys.	Use the UP and DOWN arrow keys.	Use the VOLUME and CHANNEL UP and DOWN arrow keys.	Enter TV SETUP MENU.
Make a Selection	Press the CLOSED CAPTION (CC) button or the RIGHT VOLUME key.	Press ENTER.	Press ENTER.	Press the REMOTE key in the lower left corner of the screen (<i>Discover SI only</i>).
Go Back	Use the LEFT VOLUME key.	Press MENU.	N/A	Select the DVB Menu.
Exit Setup Menu	Press and hold the POWER key for 5 seconds.	Press MENU or Press Exit.	Press TV LAST key once or press and hold the TV POWER key for 5 seconds.	Use the ARROW keys to navigate TV Setup.

BASIC FUNCTIONS OF LF TV REMOTE

BASIC FUNCTIONS

Turn the power on by pressing the ON/OFF key (1) on the remote control. A blue LED appears on the lower right corner of the TV when the power is on. The LED blinks during SLEEP mode (the back light will be off).

Press the POWER key (1) and hold for 5 seconds to access the Setup Menu.

Use the RIGHT VOLUME key (2) and LEFT VOLUME key (3) to adjust volume. The RIGHT VOLUME key (2) increases volume. The LEFT VOLUME key (3) decreases volume. A volume indicator will appear on the console while the volume is being adjusted. The volume indicator will disappear after approximately 20 seconds of inactivity.

Use the RIGHT VOLUME KEY (2) to select a menu option. Use the LEFT VOLUME key (3) to go backwards through menu options. Channels can be selected by using the NUMERIC KEYPAD (4) or by scrolling up or down through available channels by pressing the UP and DOWN channel arrow keys (5).

Press the CLOSED CAPTION (CC) key (7) to turn the closed caption on/off.

Press the MUTE key (8) to mute the sound.

The PREVIOUS key (9) can be used to select the channel viewed immediately prior to the current channel. Repeatedly pressing the PREVIOUS key can be used to toggle between two channels.

Note: The PREVIOUS key (9) acts as the “-” when entering channels. Example: Press “5”, “PREVIOUS key”, “1” to enter 5-1 as the channel.

Headphones are necessary to hear any volume adjustments. Plug headphones into the HEADPHONE JACK (6) located on the side of the remote control.


Within Set-Up Menus:

Use the RIGHT VOLUME key (2) to select a menu option. Use the LEFT VOLUME key (3) to go backwards through menu options.

Use the CC key (7) to select menu options.

Use the CC key (7) as the ENTER function when selecting channels.


Note: The Achieve™ console with Attachable TV includes the LF TV Remote. The Attachable TV System for new or previously purchased Life Fitness silver/gray commercial cardio machines includes the LF TV Remote.

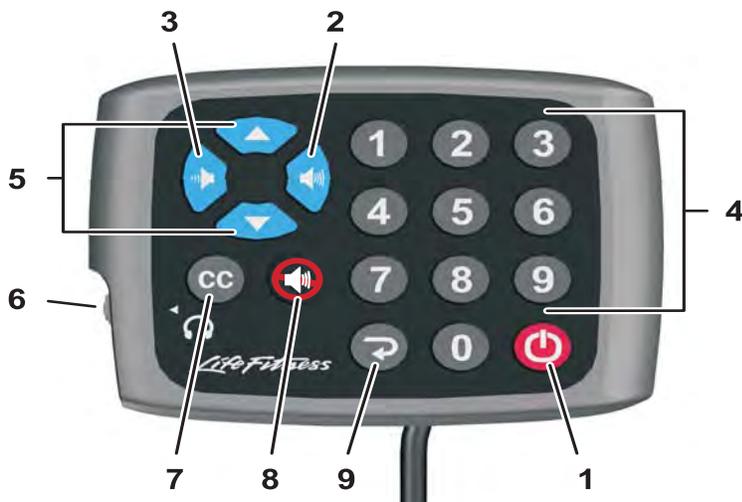

BASIC FUNCTIONS - IR TV REMOTE

IR TV REMOTE

IR TV Remote - Programming is easier with the optional IR TV Remote. Contact Life Fitness (see page one for information) to order one or more IR TV Remote controls if desired.

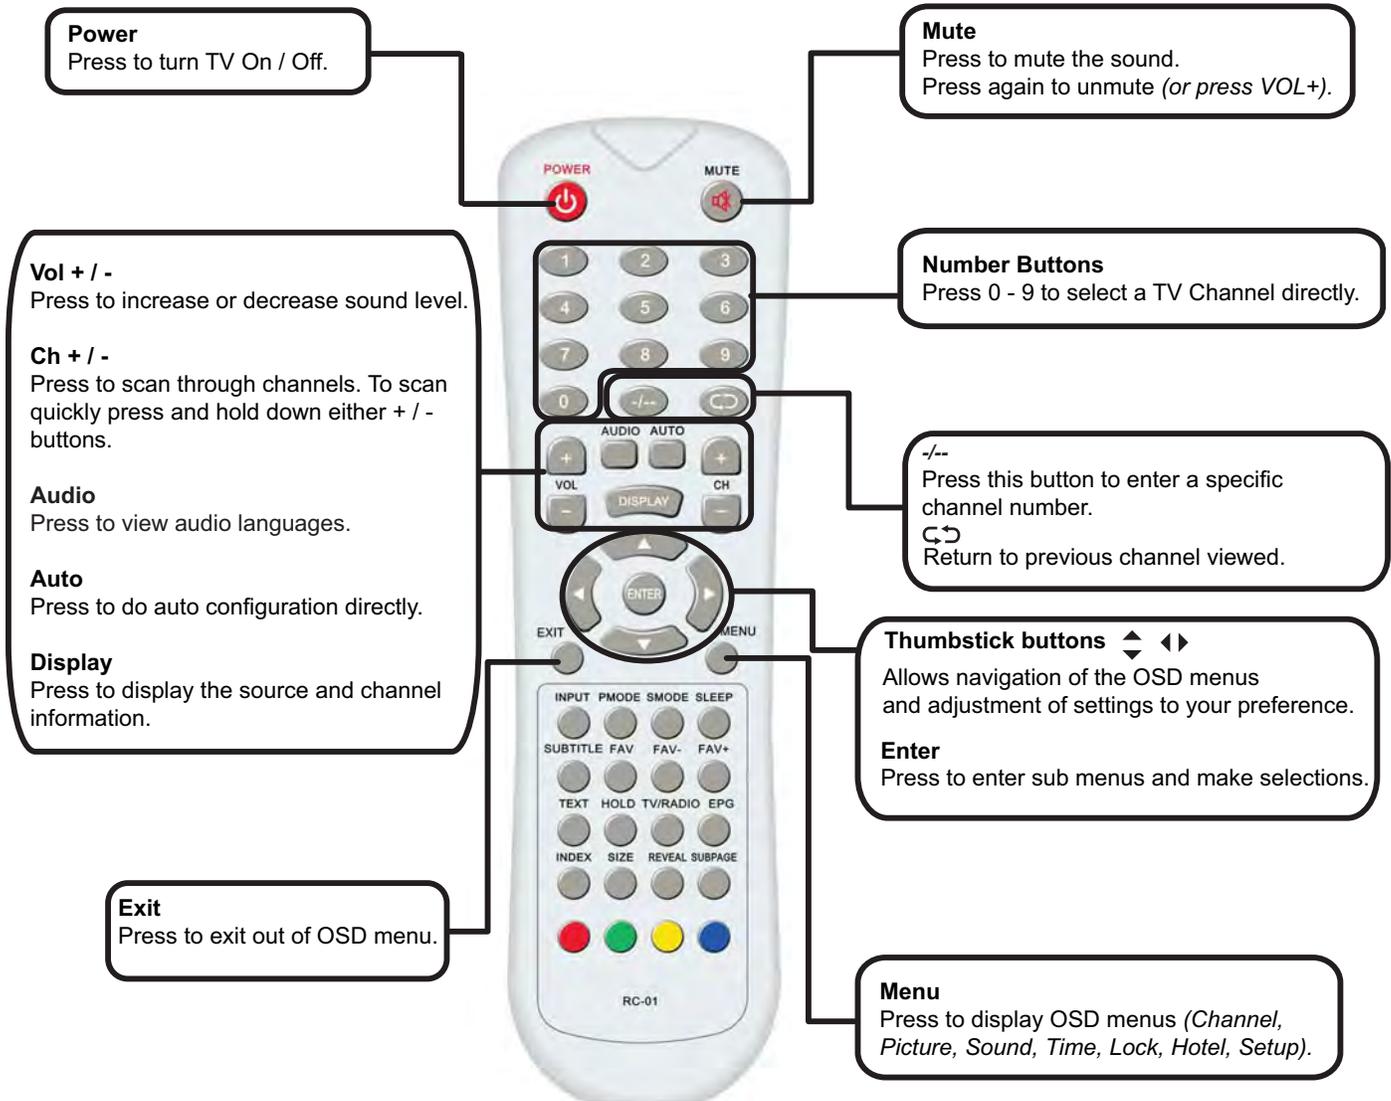

BASIC FUNCTIONS - IR TV REMOTE

Input

Press to cycle through the available input sources (TV, AV, S-Video, PC, HDMI).

P.MODE

Press repeatedly to cycle through available picture modes (Dynamic, Standard, Mild, Personal).

S.MODE

Press to cycle through available sound settings (Standard, Music, Movie, Sports, Personal).

Sleep

Select the amount of time in minutes before your TV automatically turns off.

Text

Turn ON / OFF teletext mode.

Hold (only available in teletext mode)

Remain on current page.

TV / Radio

Press to select TV or Radio mode.

EPG

Press to view the Electronic Program Guide.

Index (only available in teletext mode)

Go to first page.

Size (only available in teletext mode)

Zoom in / out.

Reveal (only available in teletext mode)

Hide or reveal concealed contents on current page.

Subpage (only available in teletext mode)

Enter / exit subpage.



Subtitle

Turn ON / OFF subtitles.

FAV

Press to view Favorite Channel List.

FAV +

Press to add a channel to Favorite List.

FAV -

Press to delete a channel from Favorite List.

Color Buttons

Use as shortcuts to edit channel settings.

IR TV REMOTE


TWO 1.5V-AAA BATTERIES ARE INCLUDED AND NECESSARY FOR OPERATION.

Installing Batteries

- 1 Open the battery compartment cover on the back side.



 - 2 Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.



- 3 Close the cover.




- ✦ Point the remote towards the remote control sensor of the wireless TV and use it within 7 meters.
- ✦ Put the used batteries into the recycling bin since it can negatively affect the environment.

TV MENU ACCESS - CONSOLE CONTROLS

INSPIRE TV CONTROLS

Inspire TV controls include:

- Power
- Channel Up / Down
- Volume Up / Down
- Input

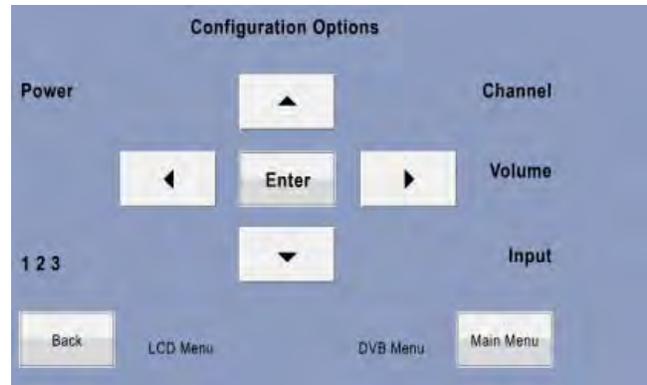

DISCOVER SI TV CONTROLS

Discover SI TV controls include:


- TV Off
- Channel Up / Down
- Numeric Keypad
- Previous Channel
- Aspect Ratio
- Input



INTEGRITY TV CONTROLS

Integrity TV controls include:

- Power
- Mute
- Last
- Numeric Keys
- Channel Up / Down
- Left / Right arrow keys to adjust volume

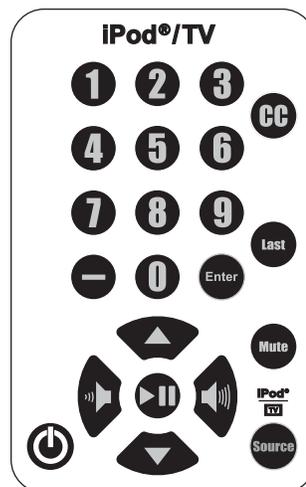

BASIC FUNCTIONS - LCD CONSOLE CONTROLS FOR EXERCISER

The Life Fitness Elevation™ Series with the Inspire™ Console and the Elevation™ Series with Discover SI Console have the TV controls built-in the integrated LCD touch screen. Inspire TV controls include power, channel up/down, numeric keypad, mute, and previous channel. Discover SI controls include TV Off, channel up/down, numeric keypad, previous channel, Aspect Ratio, and Input.

Note: Closed Caption (CC) and Secondary Audio Programming (SAP) are available in select countries.

Inspire



Discover SI



BASIC FUNCTION - FRONT PANEL CONTROLS

TV FRONT PANEL




TV On - Blue LED On

TV Off - Blue LED Off

Sleep Mode - Blue LED Blinks

GETTING STARTED

SELECT INPUT SOURCE

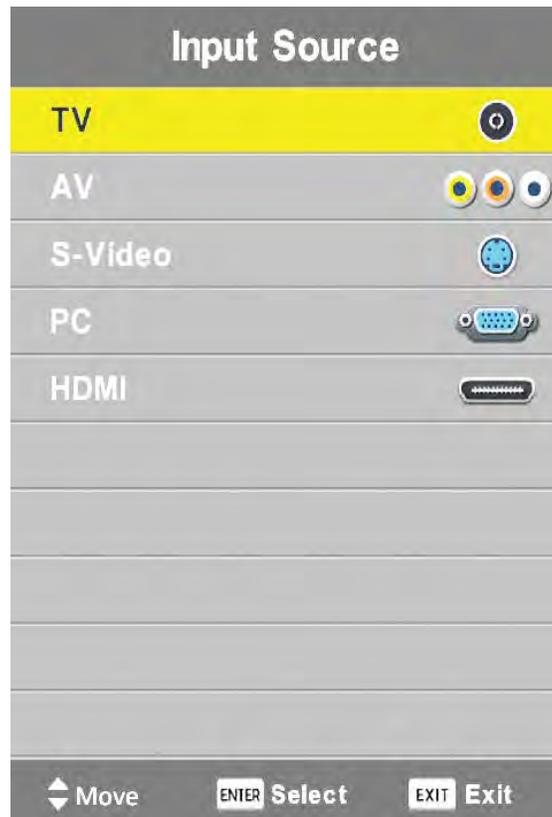

- Press INPUT button on IR TV Remote Control.
- Use  to select desired input source (*TV, AV, S-Video, PC, HDMI*).
- Press ENTER.


GETTING STARTED

FIRST TIME INSTALLATION

Connect an RF cable from the “RF-IN” to your TV aerial socket.

Press the MENU button on the IR TV Remote Control.

Use ◀▶ to select SETUP menu. Use ▲▼ to select FIRST TIME INSTALLATION.

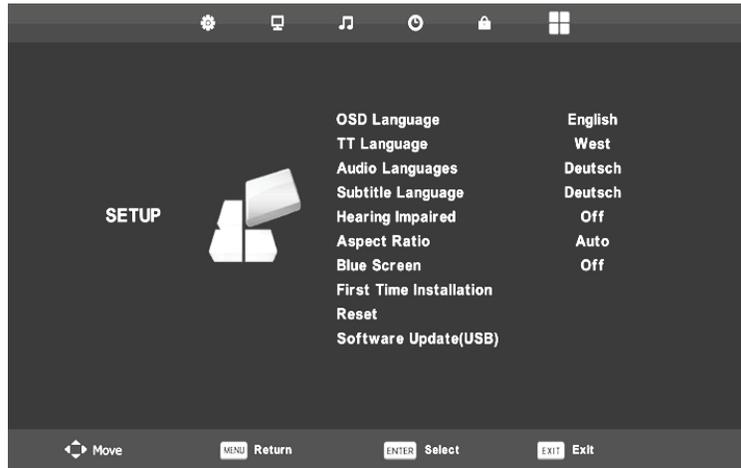

<p>Select Language & Country</p>	<p>Use ▲▼ to select OSD Language menu.</p> <p>Use ◀▶ to select the language to be used for OSD Menus and Messages.</p> <div data-bbox="548 1094 1075 1360" data-label="Image"> </div> <p>Use ▲▼ to select Country menu.</p> <p>Use ◀▶ to select the country.</p>
<p>Select Digital Type</p>	<p>Use ▲▼ to select ENTER Auto Tuning.</p> <p>Use ◀▶ to select digital type (DVB-T or DVB-C).</p> <div data-bbox="1117 1535 1500 1906" data-label="Image"> </div>

MAIN ON SCREEN DISPLAY (OSD) MENUS

Main Menus	Sub-Menus	
Channel	<ul style="list-style-type: none"> ▪ Auto Tuning ▪ ATV Manual Tuning ▪ DTV Manual Tuning 	<ul style="list-style-type: none"> ▪ Edit Channel ▪ Schedule List ▪ Signal Information
Picture	<ul style="list-style-type: none"> ▪ Picture Mode ▪ Contrast ▪ Brightness ▪ Color 	<ul style="list-style-type: none"> ▪ Tint ▪ Sharpness ▪ Color Temp ▪ Noise Reduction
Sound	<ul style="list-style-type: none"> ▪ Sound Mode ▪ Treble ▪ Bass 	<ul style="list-style-type: none"> ▪ Balance ▪ Auto Volume ▪ AD Switch
Time	<ul style="list-style-type: none"> ▪ Clock ▪ Time Zone ▪ Sleep Timer 	<ul style="list-style-type: none"> ▪ Auto Standby ▪ OSD Timer
Lock	<ul style="list-style-type: none"> ▪ Lock System ▪ Set Password ▪ Block Program 	<ul style="list-style-type: none"> ▪ Parental Guidance ▪ Hotel Mode
Hotel	<ul style="list-style-type: none"> ▪ Hotel Mode ▪ Source Lock ▪ Default Source ▪ Default Volume 	<ul style="list-style-type: none"> ▪ Max Volume ▪ Import Database ▪ Export Database ▪ Clear Lock
Setup	<ul style="list-style-type: none"> ▪ OSD Language ▪ TT Language ▪ Audio Languages ▪ Subtitle Language ▪ Hearing Impaired 	<ul style="list-style-type: none"> ▪ Aspect Ratio ▪ Blue Screen ▪ First Time Installation ▪ Reset ▪ Software Update (USB)

On Screen Display (OSD) Menu Navigation
 ▲▼ Scroll through menu options.
 ◀▶ Adjust values of selected menu option.
 Press **ENTER** to enter sub-menus and make selections.

CHANNEL MENU (DVB-T)



On Screen Display (OSD) Menu Navigation

- ◆ Scroll through menu options.
- ◀▶ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.


<p>Auto Tuning</p>	<p>Press ENTER on the IR TV Remote Control to start auto search.</p>	
<p>ATV Manual Tuning</p>	<ul style="list-style-type: none"> Current CH <ul style="list-style-type: none"> ▪ Set the channel number. Color System <ul style="list-style-type: none"> ▪ Select the color system (PAL / SECAM). Sound System <ul style="list-style-type: none"> ▪ Select the sound system (I / BG / DK / L). Fine-Tune <ul style="list-style-type: none"> ▪ Adjust the frequency of the channel. AFC <ul style="list-style-type: none"> ▪ Turn Auto Frequency Control ON / OFF. Search <ul style="list-style-type: none"> ▪ Press to search for frequencies higher and lower than the current frequency. 	

CHANNEL MENU (DVB-T) (CONTINUED)

On Screen Display (OSD) Menu Navigation

- ◆ Scroll through menu options.
- ◀▶ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.
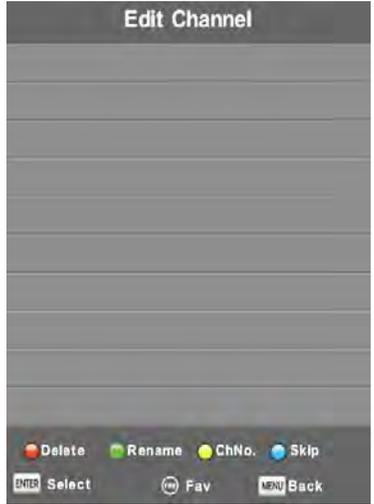
<p>DTV Manual Tuning</p>	<ul style="list-style-type: none"> ▪ Use ◀▶ to select channel. ▪ Press ENTER to search for signal. 	
<p>Edit Channel</p>	<p>Use the red, green, yellow and blue buttons on the bottom of the IR TV Remote Control to edit channel settings.</p> <p>Red button</p> <ul style="list-style-type: none"> ▪ Delete channel. <p>Green button</p> <ul style="list-style-type: none"> ▪ Enter Rename menu. ▪ Use ◀▶ to select the word you want to change. ▪ Use ◆ to select word. <p>Yellow button</p> <ul style="list-style-type: none"> ▪ Use ◀▶ to move the position of the current channel. <p>Blue button</p> <ul style="list-style-type: none"> ▪ Skip the selected channel. <p>FAV / FAV + / FAV - buttons</p> <ul style="list-style-type: none"> ▪ Press to display Favorite menu. ▪ Press FAV + to add channel to Favorite list. ▪ Press FAV - to delete channel from Favorite list. 	





CHANNEL MENU (DVB-T) (CONTINUED)

On Screen Display (OSD) Menu Navigation

◆ Scroll through menu options.

◀▶ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.
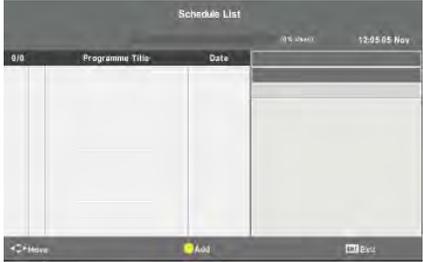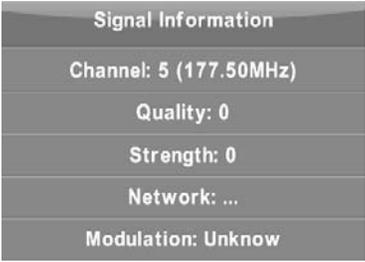
<p>Schedule List</p>	<ul style="list-style-type: none"> Pre-set programs. Add programs to the list by pressing the yellow button the the IR TV Remote Control. 	
<p>Signal Information</p>	<ul style="list-style-type: none"> View signal information. <p>Note: Only available when there is a DTV signal.</p>	

CHANNEL MENU (DVB-C)



On Screen Display (OSD) Menu Navigation


- ◄► Scroll through menu options.
- ◄► Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

<p>Auto Tuning</p>	<p>Use ◄► to adjust the values of the following options:</p> <ul style="list-style-type: none"> ▪ Scan type (<i>Quick or Full</i>) ▪ Network ID (<i>Auto or 100</i>) ▪ Frequency (<i>Auto or 77000</i>) ▪ Symbol Rate (<i>Auto or 6900</i>) 	
<p>CADTV Manual Tuning</p>	<p>Use ◄► to adjust the values of the following options:</p> <ul style="list-style-type: none"> ▪ Frequency ▪ Symbol (ks /s) ▪ Select QAM type (<i>QAM16, QAM32, QAM64, QAM128 or QAM256</i>) 	

Note: Menus and descriptions for Auto Tuning, ATV Manual Tuning, Edit Channel, Schedule List and Signal Information settings are the same as the information listed for CHANNEL menu (DVB-T).

PICTURE MENU

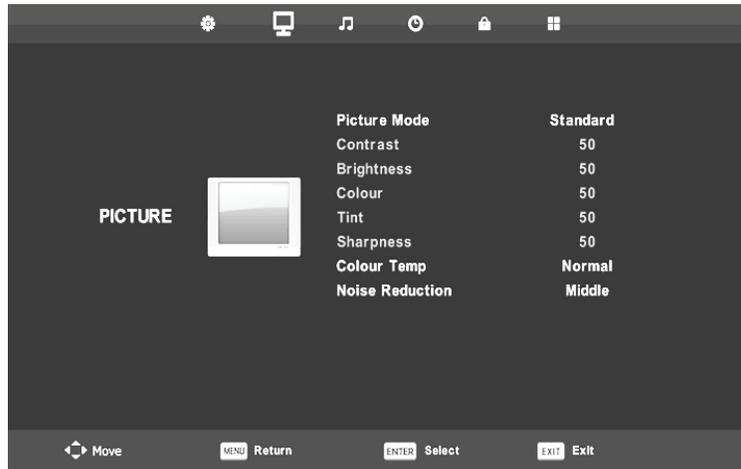

On Screen Display (OSD) Menu Navigation


◄► Scroll through menu options.

◄► Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

<p>Picture Mode</p>	<p>Select desired picture mode:</p> <ul style="list-style-type: none"> ▪ Dynamic (produces a high defined image in a brightly lit room) ▪ Standard (produces a high defined image in a normally lit room) ▪ Mild (produces a high defined image in a gently lit room) ▪ Personal (customizes picture settings) <p>Note: Press PMODE button on the IR TV Remote Control to change the picture mode directly.</p> 	
<p>Contrast Brightness Color, Tint Sharpness</p>	<p>Use ◄► to adjust.</p> <ul style="list-style-type: none"> ▪ Contrast (adjust the highlight intensity) ▪ Brightness (adjust optical fiber output) ▪ Color (adjust saturation) ▪ Tint (adjust color changed with the transmission in the NTSC code) ▪ Sharpness (adjust the peaking in the picture's detail) <p>Note: The PERSONAL picture mode must be selected in order to adjust contrast, brightness, color, tint and sharpness levels. The TINT setting can only be adjusted in certain input sources and with the NTSC color system.</p>	

PICTURE MENU (CONTINUED)

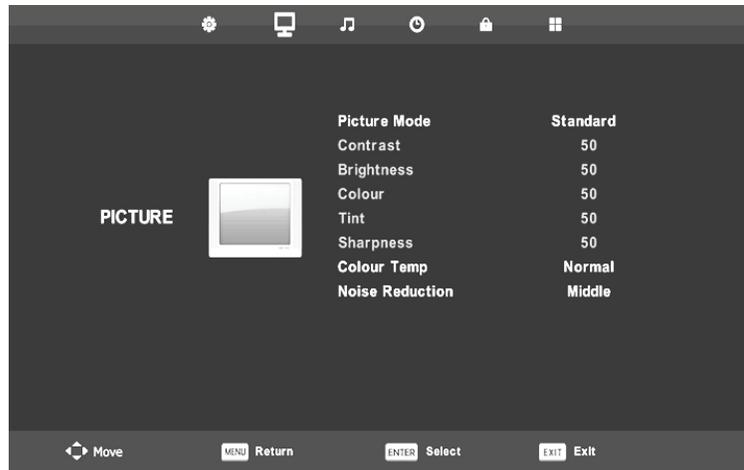

On Screen Display (OSD) Menu Navigation

⬆️ ⬆️ Scroll through menu options.

⬅️ ➡️ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.


<p>Color Temp</p>	<p>Color temperature increases or decreases the warm and cool colors of the picture.</p> <p>Select desired color temp:</p> <ul style="list-style-type: none"> ▪ Cold (produces a gentle blue-hued image) ▪ Normal (produces a vivid image) ▪ Warm (produces a red-hued image) 	<p>The screenshot shows the Colour Temp menu with the following options:</p> <ul style="list-style-type: none"> Cold Normal (highlighted) Warm <p>Navigation controls at the bottom: ENTER Select, MENU Back.</p>
<p>Noise Reduction</p>	<p>Noise reduction reduces the image noise and improves the quality of the picture.</p> <p>Select desired noise reduction level:</p> <ul style="list-style-type: none"> ▪ Off (turns off video noise detection) ▪ Low (detects and reduces low video noise) ▪ Middle (detects and reduces moderate video noise) ▪ High (detects and reduces enhanced video noise) ▪ Default (switches the video noise to the default setting) 	<p>The screenshot shows the Noise Reduction menu with the following options:</p> <ul style="list-style-type: none"> Off Low Middle (highlighted) High Default <p>Navigation controls at the bottom: ENTER Select, MENU Back.</p>

SOUND MENU




On Screen Display (OSD) Menu Navigation

- ◄► Scroll through menu options.
- ◄► Adjust values of selected menu option.
- Press **ENTER** to enter sub-menus and make selections.
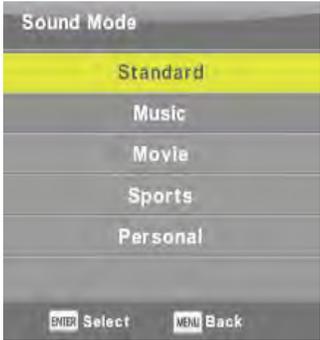
<p>Sound Mode</p>	<p>Select desired sound mode:</p> <ul style="list-style-type: none"> ▪ Standard (produces a balanced sound in all environments) ▪ Music (preserves the original sound; good choice for musical programs) ▪ Movie (enhances treble and bass for a richer sound) ▪ Sports (enhances vocals for sports) ▪ Personal (customizes audio settings) <p>Note: Press SMODE button on the IR TV Remote Control to change the sound mode directly.</p> 	
<p>Treble Bass Balance</p>	<p>Use ◄► to adjust treble effect, bass effect, and the balance between the left and right speakers.</p> <p>Note: The PERSONAL sound mode must be selected in order to adjust treble and bass settings.</p>	
<p>Auto Volume</p>	<ul style="list-style-type: none"> ▪ Select ON or OFF. ▪ Automatically reduces sudden volume changes (for example, when switching between channels). ▪ Reduces sound fluctuation. 	

TIME MENU

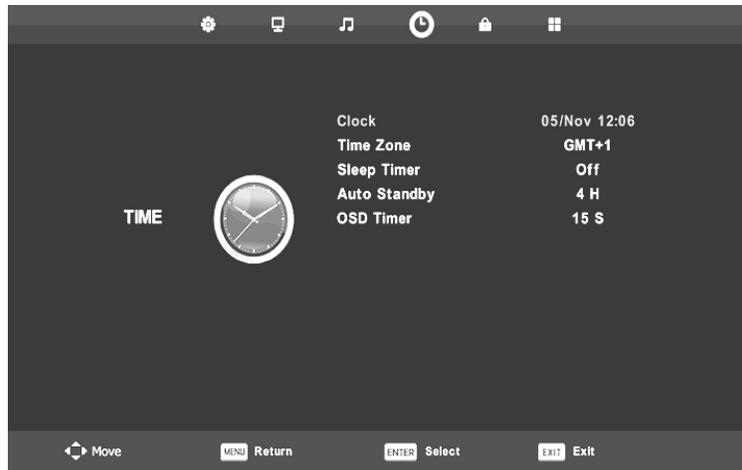

On Screen Display (OSD) Menu Navigation

▲▼ Scroll through menu options.

◀▶ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

Clock	<i>This setting cannot be adjusted.</i>
Time Zone	Use ◀▶ to select desired time zone.
Sleep Timer	<p>Select the time in minutes for the TV to automatically shut down.</p> <p>Available options are:</p> <ul style="list-style-type: none"> ▪ Off ▪ 10, 20, 30, 60, 90, 120, 180 or 240 minutes <div style="display: flex; justify-content: space-around; align-items: center;">   </div>

TIME MENU (CONTINUED)



On Screen Display (OSD) Menu Navigation

◆ Scroll through menu options.

◀▶ Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

<p>Auto Standby</p>	<p>Select the desired time in hours for the TV to remain on after your last operation.</p> <p>Available options are:</p> <ul style="list-style-type: none"> ▪ Off ▪ 3, 4, or 5 hours 	
<p>OSD Timer</p>	<p>Select the desired time in seconds for the On Screen Menu Display to remain on after the last operation.</p> <p>Available options are:</p> <ul style="list-style-type: none"> ▪ 5, 10, 15, 20, 25, or 30 seconds 	

LOCK MENU



On Screen Display (OSD) Menu Navigation

- ◄► Scroll through menu options.
- ◄► Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

<p>Lock System</p>	<ul style="list-style-type: none"> ▪ Select ON to lock the system. ▪ Default password is 0000. 	
<p>Set Password</p>	<ul style="list-style-type: none"> ▪ Input a new 4-digit password. ▪ Re-enter password to confirm. ▪ Press ◄► to select SET PASSWORD. 	
<p>Block Program</p>	<p>Lock or Unlock TV programs.</p> <ul style="list-style-type: none"> ▪ Use ◄► to scroll through the TV programs and select the one you want to lock. ▪ Press green button on IR TV Remote Control to lock / unlock the program. 	
<p>Parental Guidance</p>	<ul style="list-style-type: none"> ▪ Select OFF or desired level. 	
<p>Hotel Mode</p>	<ul style="list-style-type: none"> ▪ Press ENTER to enter Hotel Sub-Menu (see next page for further explanation of Hotel Menu). 	

HOTEL MENU




On Screen Display (OSD) Menu Navigation

- ◆ Scroll through menu options.
 - ◀▶ Adjust values of selected menu option.
- Press **ENTER** to enter sub-menus and make selections.

<i>Hotel Mode</i>	<ul style="list-style-type: none"> ▪ Use ◀▶ to select ON or OFF.
<i>Source Lock</i>	<ul style="list-style-type: none"> ▪ Use ◀▶ to select the source you want to lock.
<i>Default Source</i>	<ul style="list-style-type: none"> ▪ Use ◀▶ to select the default source.
<i>Default Volume</i>	<ul style="list-style-type: none"> ▪ Use ◀▶ to adjust the default volume level.
<i>Max Volume</i>	<ul style="list-style-type: none"> ▪ Use ◀▶ to adjust the maximum volume level. ▪ The volume can't be adjusted above the set maximum level.
<i>Import Database</i>	<ul style="list-style-type: none"> ▪ Import hotel mode settings from USB.
<i>Export Database</i>	<ul style="list-style-type: none"> ▪ Export hotel mode settings to USB.
<i>Clear Lock</i>	<ul style="list-style-type: none"> ▪ Reset default settings.

SETUP MENU

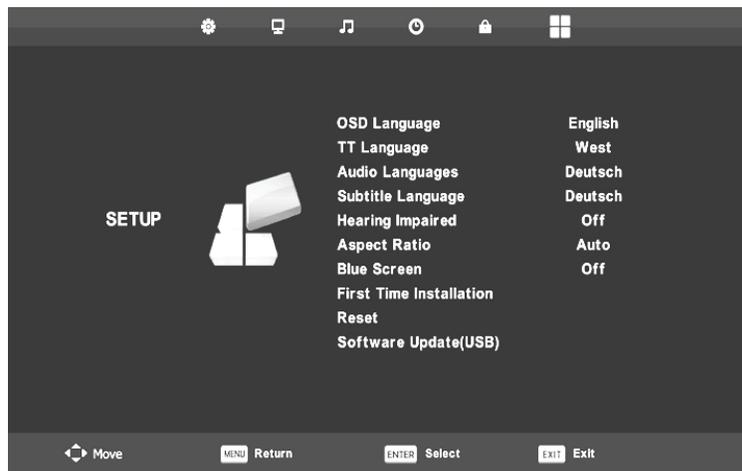

On Screen Display (OSD) Menu Navigation

- ◄► Scroll through menu options.
- ◄► Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

OSD Language	<ul style="list-style-type: none"> ▪ Use ◄► to select OSD Menu language. ▪ Default setting is English.
TT Language	<ul style="list-style-type: none"> ▪ Choose teletext language (<i>West, East, Russian, Arabic or Farsi</i>).
Aspect Ratio	<ul style="list-style-type: none"> ▪ Adjust the size ration of the picture shown on the screen. ▪ Choose ratio (<i>Auto, 4:3, 16:9, Zoom1, Zoom2, or Full Screen</i>). 
Audio Languages	<ul style="list-style-type: none"> ▪ Use ◄► to select primary or secondary audio language. ▪ Use ◄► to select languages.
Subtitle Language	<ul style="list-style-type: none"> ▪ Use ◄► to select primary or secondary subtitle language. ▪ Use ◄► to select languages.
Hearing Impaired	<ul style="list-style-type: none"> ▪ Select ON / OFF.
Blue Screen	<ul style="list-style-type: none"> ▪ Select OFF to have a black screen to appear while changing channels. ▪ Select ON to have a blue screen appear while changing channels.
First Time Installation	<ul style="list-style-type: none"> ▪ Set options including OSD language, country, and tuning. See <i>Getting Started First Time Installation</i> for more details.
Reset	<ul style="list-style-type: none"> ▪ Reset all settings to factory defaults.
Software Update (USB)	<ul style="list-style-type: none"> ▪ Update the TV software from USB.

SCREEN MENU - PC INPUT SOURCE



On Screen Display (OSD) Menu Navigation

- ◄► Scroll through menu options.
- ◄► Adjust values of selected menu option.

Press **ENTER** to enter sub-menus and make selections.

Auto Adjust	<ul style="list-style-type: none"> ▪ Press ENTER or use ► to automatically adjust the screen to the optimal position of the picture.
H-Offset	<ul style="list-style-type: none"> ▪ Adjust the horizontal position of the picture.
V-Offset	<ul style="list-style-type: none"> ▪ Adjust the vertical position of the picture.
Size	<ul style="list-style-type: none"> ▪ Adjust the display size.
Phase	<ul style="list-style-type: none"> ▪ Adjust the horizontal interfering lines.
Position Reset	<ul style="list-style-type: none"> ▪ Press ENTER to reset position.

Notes:

When PC is the selected INPUT SOURCE:

1. Sharpness and Noise Reduction in the PICTURE menu are not applicable.
2. Block Program in the LOCK menu is not applicable.
3. Audio Languages, Subtitle Language, and Hearing Impaired options in the SETUP menu are not applicable.
4. No CHANNEL menu available in PC Mode.

MAINTENANCE & TROUBLESHOOTING

The Life Fitness Attachable TV System requires little maintenance and has been designed to withstand the environment of a fitness facility. However, please review our suggestions on cleaning and troubleshooting your Life Fitness Attachable TV System.

CLEANING

Regularly (*at least once a week*) clean the Life Fitness Attachable TV and cardio equipment using mild soap and water. Lightly dampen a soft clean cloth with the mild soap and water solution and wipe the product. Do not use too much solution on the cloth and do not spray or pour any solution directly on the products. Doing so could cause damage to the LCD panel or remote controls.

CAUTION: Do not use liquid cleaners or aerosol cleaners to clean the screen. Do not use any solvents such as alcohol and paint thinner or acidic cleaners.

LIFE FITNESS APPROVED CLEANERS *(United States Availability Only)*

Two preferred cleaners have been approved by LIFE FITNESS reliability experts: PureGreen 24 and Gym Wipes. Both cleaners will safely and effectively remove dirt, grime and sweat from equipment. PureGreen 24 and the Antibacterial Force formula of Gym Wipes are both disinfectants that are effective against MRSA and H1N1. PureGreen 24 is available in a spray which is convenient for gym staff to use. Apply the spray to a microfiber cloth and wipe down the equipment. Use PureGreen 24 on the equipment for at least 2 minutes for general disinfection purposes and at least 10 minutes for fungus and viral control. Gym Wipes are large, durable pre-moistened wipes to use on the equipment before and after workouts. Use Gym Wipes on the equipment for at least 2 minutes for general disinfection purposes.

Contact Customer Support Services to order these cleaners (1-800-351-3737 or email: customersupport@lifefitness.com).

LIFE FITNESS COMPATIBLE CLEANERS

Mild soap and water or a mild non-abrasive household cleaner can also be used to clean the display and all exterior surfaces. Use a soft microfiber cloth only. Apply the cleaner to the microfiber cloth before cleaning. DO NOT use ammonia or acid based cleaners. DO NOT use abrasive cleaners. DO NOT use paper towels. DO NOT apply cleaners directly to the equipment surfaces.

TROUBLESHOOTING

If you are having a problem with your TV, try the suggestions below and on the next several pages. If the problem persists, contact Life Fitness Customer Support Services as outlined in the front of this manual.

Problem	Possible Solutions
Reset the TV to factory settings.	Refer to the Setup Menu for instruction on how to access the Reset option.
No picture, no sound	Make sure the power cord is plugged in. Be sure the power is on by pressing the on/off button on the remote control. Choose an alternate channel using the channel up/down arrow keys.
Poor or no picture, good sound	Refer to the Picture Menu. Adjust the options as instructed to improve the picture quality. Check the antenna and/or cable connections. Have your service provider confirm that the signal level at the machine is 72 dBuV + / - 25 dB. This is equivalent to +12 dBmV, and includes the range of -13 dBmV to +37dBmV. These levels are acceptable for both analog and digital TV signals.

MAINTENANCE & TROUBLESHOOTING

Problem

Possible Solutions

Only snow appears on the screen	<p>Check the antenna and/or cable connections.</p> <p>Make sure the channel selected is currently broadcasting.</p> <p>Confirm the correct Air/Cable option is selected. Refer to the Channel Menu.</p>
Dotted lines or stripes	<p>Adjust the antenna.</p> <p>Move the TV away from other electronic equipment. Some electronic equipment creates electrical noise, which can interfere with TV reception.</p>
Double images or ghosts	<p>Check your outdoor antenna or call your cable service.</p>
Unable to switch to a particular	<p>Confirm the correct Air/Cable option is selected. Refer to the Channel Menu.</p> <p>Perform a Scan Channel or add a channel manually. Refer to the Channel Menu.</p>
Screen does not turn on	<p>Check the power supply for 12 volts DC and replace if faulty.</p> <p>Remove the remote and test it against a working unit. Replace if faulty.</p> <p>Replace TV.</p>
Channels do not change	<p>Remove the remote and test against a working unit. Replace if faulty.</p> <p>Rerun Auto Scan.</p> <p>Replace TV.</p>
Sound does not change	<p>Remove the remote and test it against a working unit. Replace if faulty.</p> <p>Replace TV.</p>
No sound	<p>Replace headphones.</p> <p>Replace headphone jack.</p> <p>Remove the remote and test it against the working unit. Replace if faulty.</p> <p>Replace TV.</p>
Unable to receive any channels when using cable	<p>Follow the install and setup procedures in the Installation Instructions.</p> <p>Replace Coax Cable (75 Ohms).</p> <p>Replace TV.</p>

MAINTENANCE & TROUBLESHOOTING

Problem	Possible Solutions
Snow and noise appear on screen.	Follow the install and setup procedures in the Installation Instructions. Replace Coax Cable (75 Ohms). Replace TV.
Some channels, or no channels, found after a channel scan.	Check connections at wall plugs and where cables connect with the TV (and other devices such as VCRs, DVD players, etc.) Replace cables, connectors, outlets, and splitters with high quality components, Quad Shield coaxial cables, and "F" connectors.

MAINTENANCE & TROUBLESHOOTING

ADVANCED TROUBLESHOOTING

If the picture regularly breaks up, then the signal received may be too weak or too strong to allow the digital TV receiver to generate a stable picture.

Have your service provider confirm that the signal level at the machine is 72 dBuV + / - 25 dB. This is equivalent to +12 dBmV, and includes the range of -13 dBmV to +37dBmV. These levels are acceptable for both analog and digital TV signals.

If signal levels are not OK, you are unlikely to have good reception unless signal strength can be improved. Antenna relocation or changes to your amplifiers (masthead or distribution) may be indicated.

Remember amplifiers should only be used by your installer to provide the minimum necessary boost to signal strength.

Interference from impulse noise may be causing pictures to break up and audio to drop out momentarily.

Check for domestic sources of impulse noise (i.e. the use of light switches, fridges, hair dryers, air conditioner, etc.).

If present, arrange for all cables, connectors, outlets and splitters between the antenna and the receiver to be upgraded in accordance with antenna installation guidelines. Recommends the use of quad shielded coaxial cable and F connectors.

A masthead amplifier may have boosted the signal outside the receiver's "operating window", making reception impossible.

The masthead amplifier (appears as a small box on the antenna pole within about a meter of the antenna arms) may be able to be turned down. If your antenna is on your roof you should arrange for an antenna installer to perform this task.

When digital broadcasting services begin operating in an area some masthead amplifiers (boosters) operating at maximum output or maximum gain may need to be turned down to avoid signal overload for digital receivers. This matter should be determined by an antenna installer, who will be able to adjust the amplifier for you.

Please note that performing this operation may affect any existing analog signals, so you **MAY** need to find a medium point between adequate analog reception and good digital reception.

MAINTENANCE & TROUBLESHOOTING

REPLACING HEADPHONE JACK ON THE WIRED REMOTE CONTROL

Check the headphone jack when you cannot hear audio or the audio quality is poor. The headphone jack is designed to be easily and quickly replaced in the facility.

1. Take out headphone jack.
2. Disconnect audio cable.
3. Slide the stereo plug on the audio cable in the new headphone jack.
4. Replace the headphone jack.

IMPORTANT: Do not stretch, crimp or damage the cable. Cables damaged by improper installation will not be covered by the warranty.

SERVICE

Any service, other than cleaning or user maintenance, must be performed by an authorized service representative.

For information about product service or operation, please contact Life Fitness Customer Service.

IMPORTANT: Do not attempt to service any of the Attachable TV System products except the service described in this manual.

RETURNING EQUIPMENT TO LIFE FITNESS

To return equipment to Life Fitness for any reason, you must contact Life Fitness to obtain a return maintenance authorization (RMA) number (see page one for contact information). When you request an RMA number, please explain why you are returning the equipment.

IMPORTANT: Equipment must be shipped with an RMA number in order for Life Fitness to process the return.

WARRANTY INFORMATION

WHAT IS COVERED.

This LIFE FITNESS commercial exercise equipment ("Product") is warranted to be free of all defects in material and workmanship.

WHO IS COVERED.

The original purchaser or any person receiving a newly purchased Product as a gift from the original purchaser. Warranty will be voided on subsequent transfers.

HOW LONG IS IT COVERED.

All coverage is provided by specific Product according to the guidelines listed on the chart below.

WHO PAYS TRANSPORTATION & INSURANCE FOR SERVICE.

If the Product or any covered part must be returned to a service facility for repairs, We, LIFE FITNESS, will pay all transportation and insurance charges for the first year. You are responsible for transportation and insurance charges during the second and third years (if applicable).

WHAT WE WILL DO TO CORRECT COVERED DEFECTS.

We will ship to you any new or rebuilt replacement part or component, or, at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.

WHAT IS NOT COVERED.

Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any construction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without our written authorization or by failure on your part to use, operate and maintain the Product as set out in your Operation Manual ("Manual").

All terms of this warranty are void if this product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii and Canada) and are then subject to the terms provided by that country's local authorized LIFE FITNESS representative.

Model	2 years	90 days
15" Attachable TV	Electrical and mechanical parts.	Labor

*Warranties outside the U.S. may vary.
Specifications subject to change.*

WHAT YOU MUST DO.

Retain proof of purchase; use, operate and maintain the Product as specified in the Manual; notify Customer Support Services of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement or, if necessary, the entire Product for repair.

OPERATION MANUAL: It is VERY IMPORTANT THAT YOU READ THE MANUAL before operating the Product. Remember to perform the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

HOW TO GET REPLACEMENT PARTS & SERVICE.

Refer to page one of this manual for your local service contact information. Reference your name, address and the serial number of your Product (consoles and frames may have separate serial numbers). They will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located.

EXCLUSIVE WARRANTY.

THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES OF ANY KIND EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, AND ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART. We neither assume nor authorize any person to assure for us any other obligation or liability concerning the sale of this Product. Under no circumstances shall we be liable under this warranty, or otherwise, of any damage to any person or property, including any lost profits or lost savings, for any special, indirect, secondary, incidental or consequential damages of any nature arising out of the use of or inability to use this Product. Some states do not allow the exclusion or limitation of implied warranties or of liability for incidental or consequential damages, so the above limitations or exclusions may not apply to you.

CHANGES IN WARRANTY NOT AUTHORIZED.

No one is authorized to change, modify or extend the terms of this limited warranty.

EFFECT OF STATE LAWS.

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

OUR PLEDGE TO YOU.

Our Products are designed and manufactured to the highest standards. We want you completely satisfied with our Products and will do everything possible under the terms of this warranty to keep you secure in knowing you have bought the best!